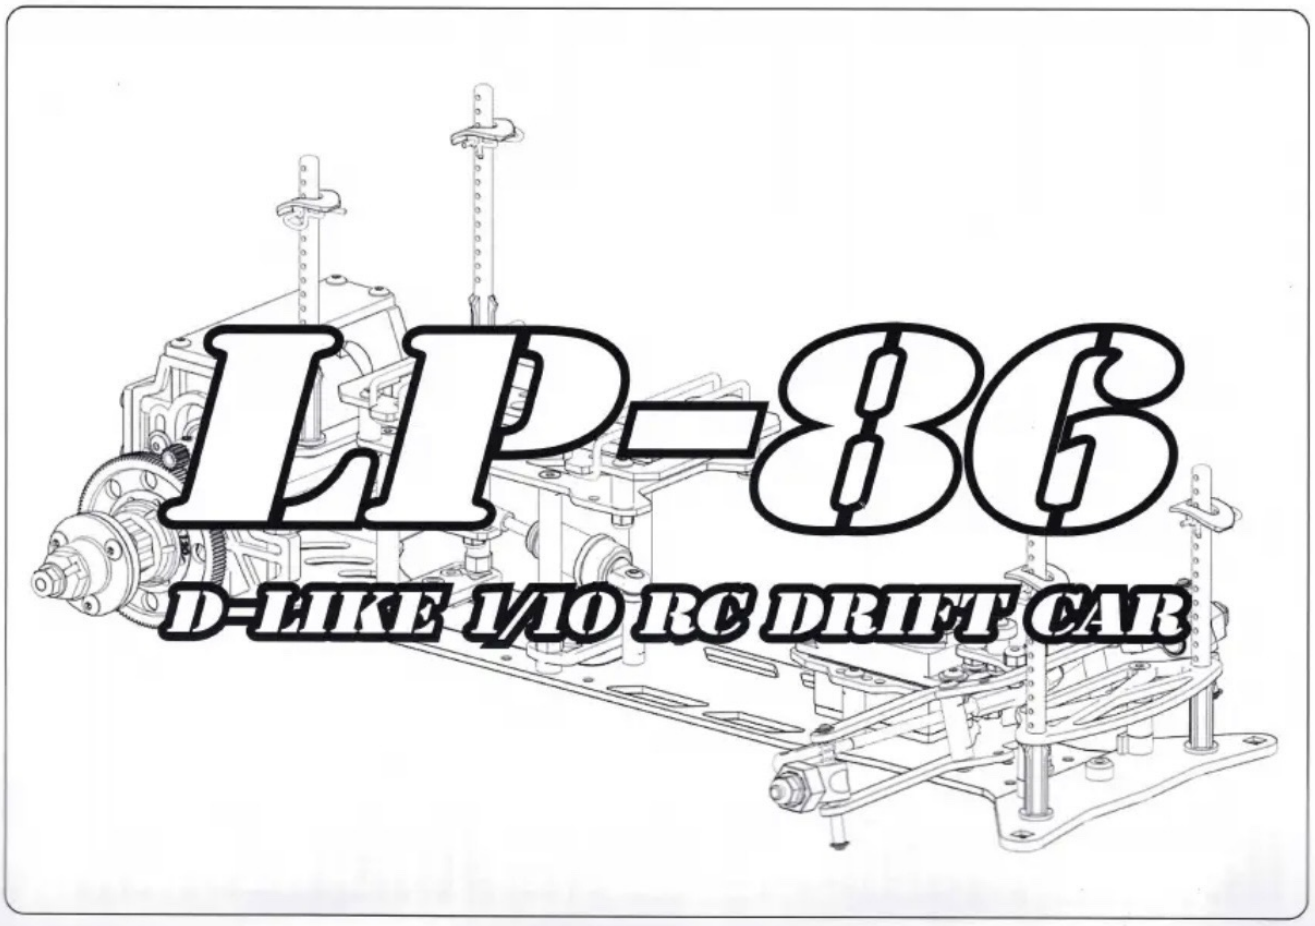
LP-86
D-LIKE 1/10 RC DRIFT CAR

D-LIKE

安全に楽しんで頂くための 注意事項

お子様（中学生以下）が組立・走行する際は、必ず保護者の方が付き添い 安全を確認して下さい。

組立の注意

・幼児のいる場所では組み立てないで下さい。小さな部品を飲み込む等、非常に危険です。

・組立の前に必ず内容をお確かめ下さい。万一不良部品、不足部品などがあった場合は、カスタマーサービスまでお問い合わせ下さい。

・組立の前に説明書を最後まで読み、全体の流れをつかむと効率的な組立ができます。

・組み立てる際は、様々な工具が必要になります。安全の為に必ず作業内容に合った工具を使用して下さい。又、カッターナイフ等を使用する際は危険を伴いますので、注意して下さい。

・部品には様々な素材を使用しています。切削加工された金属パーツ等はエッジが鋭く、慎重な組立が必要となります。ケガをしないように注意して下さい。

・プラスティックパーツなどを切断する際は、切断した部品が飛ぶ危険があるので、注意して下さい。

・回転部や駆動部はできるだけスムーズに動作するように組み立てて下さい。

・配線やコード類はきれいにまとめて下さい。回転部分や走行路面にコードが接触すると危険です。又、配線は確実に接続されていないとショートなどの恐れや、性能を十分に発揮出来ない場合があります。

・必要以上の分解、改造をすると安全性が低下したり走行性能が十分に発揮出来なくなる場合があります。

走行の注意

・R/Cカーは、時速40kmを超える速いスピードが出るモデルもあります。
ルールを守って安全な場所や、R/Cカー用サーキットで走らせて下さい。

・公道等、周囲の人の迷惑になるような場所では絶対に走らせないでください。

・R/Cカーは電波を利用する為、何らかのトラブルで最悪の場合は暴走することがあります。狭い場所や室内は避け、出来るだけ広い、障害物の無い場所で走らせて下さい。

・周囲にR/Cカーを走らせている人がいる場合は、電波が重ならないように、周波数を確認し合って、安全を確かめて下さい。

・R/Cカーは水を嫌います。雨の日や、水たまりのある場所で走らせると、
R/Cメカが壊れたり、暴走する危険があります。

・R/Cカーの駆動部分、ギヤ、タイヤなどは高回転で回ります。バッテリーを接続した後は危険ですので、回転部分に手を触れないで下さい。

・走行後のR/Cカーは各部が高温になる事があります。危険ですので冷却期間をおいてから、メンテナンスなどをして下さい。

走らせる手順

1. タイヤが空転するように、台の上にR/Cカーを置きます。
2. スピードコントローラのスイッチがOFFになっている事を確認してから、モーターとバッテリーを接続します。
3. 送信機のアンテナを伸ばし、スイッチをONにします。
（送信機の電圧が下がっていると危険です。常に電圧の高い状態で使用して下さい。）
4. 受信機のスイッチをONにします。

走行終了手順

1. スピードコントローラのスイッチをOFFにします。
2. バッテリーの接続を外します。
3. 送信機のスイッチをOFFにし、アンテナを縮めます。

バッテリーの取り扱い

（バッテリーに付属の説明書に基づき使用して下さい。）

・バッテリーを充電する際は、周囲に燃えやすいもののない安全な場所で行って下さい。又、高温な場所での充電も避けて下さい。

・バッテリーの充電中は充電状況を常に確認して下さい。充電器の誤動作などで過充電すると、最悪の場合は発火する危険性があります。バッテリー温度が50度を超えたら充電を中止して下さい。

・走行後のバッテリーは高い温度になります。連続使用するとバッテリーを傷
めることになりますので、冷却期間を置いてから充電して下さい。
又、走行後のバッテリーはコンディション放電することによって、性能を持続させる事が出来ます。

・不要になったバッテリーは一般のゴミと一緒に捨てずに、
お手数でも電池専用の回収箱に捨てて下さい。

モーターの取り扱い

（モーターに付属の説明書に基づき使用して下さい。）

・モーターの性能に合ったギヤ比を選択して下さい。ギヤ比が最適でないとモーターの性能を十分に発揮出来ないだけでなく、他のR/Cメカを壊す原因にもなります。

・走行後のモーターは非常に高い温度になります。連続走行するとモーターを傷
める事になりますので、冷却期間を置いてから走行して下さい。

PRECAUTIONS FOR SAFE ENJOYMENT OF YOUR R/C CAR

D-LIKE

For children under the age of 13, parental guidance is recommended when running.

ASSEMBLY PRECAUTIONS

●Do not assemble around small children. The parts can be dangerous if accidentally swallowed.

●Check the contents carefully before assembly. Please contact Customer Support if you happen to notice any defective or missing items.

●You will find the assembly process much easier by carefully reading through the manual, and familiarizing yourself with the instructions.

●Many different tools are required during assembly. For safety purposes, please use suitable tools. Exercise extra caution when using a sharp tool such as a hobby knife.

●Many different materials are used for the parts. Use extra care when handling parts with sharp edges, such as machined metal parts.

●When cutting plastic parts, watch for any flying parts.

●Try to assemble any rotating parts or drivetrain parts as smooth as possible.

●Bundle wires neatly away from the ground or any moving drivetrain components. Make sure that all wires are properly connected to prevent shorting.

●Unnecessary modifications may be unsafe and hinder performance.

PRECAUTIONS BEFORE RUNNING

●R/C cars some models may exceed speeds of 40km per hour. Practice common sense and run the car in open safe places, or R/C car tracks.

●Do not run the car on public roads with high amounts of traffic, or in areas that may cause an inconvenience to people in that area.

●R/C cars are controlled using a radio frequency. In a worst-case scenario.
Radio interferences may cause loss of control.

●If others near you are running R/C cars, confirm that they are not running on the same frequency.

●R/C cars do not like water. Avoid running on rainy days, or areas with water puddles. Exposure of the electronics to water may cause loss of control or damage to the electronics.

●The drivetrain of an R/C car consists of many moving parts like gears, shafts, and tires. Avoid touching these areas when the battery is connected.

●Many parts of an R/C car will become hot after running. Allow the parts to sufficiently cool before conducting any maintenance.

BEGINNING A RUN

1. Place the R/C car on a stand so the wheels are off the ground.
2. Confirm that the speed controller switch is OFF, and connect the motor and battery.
3. Extend the transmitter antenna and turn the switch ON. (It is unsafe to use a transmitter with low voltage. Make sure that the transmitter batteries are good before running)
4. Turn the speed controller switch ON.

FINISHING A RUN

1. Turn the speed controller switch OFF.
2. Disconnect the battery.
3. Turn the transmitter switch OFF, and retract the antenna.

BATTERY USAGE

(Carefully read the instruction included with the batteries.)

●When charging batteries, make sure that the surrounding area is void of anything highly flammable. Also avoid charging in high-temperature locations.

●When charging batteries, frequently monitor the charging it catch on fire.
If the battery reaches 50 degrees Celsius or more, stop charging.

●Batteries will become hot after running. Continuous use of the battery pack may result in damage to the cells. Allow the battery too cool down before re-charging. Using a battery conditioner after running may prolong the life and performance of the battery.

●Please do not discard old battery packs in the trash. Although inconvenient,
please locate a battery disposal center.

MOTOR USAGE

(Carefully read the instruction included with the motor.)

●Connecting a 7.2V battery directly to the motor can be very dangerous.

●Choose a gear ratio that matches the power characteristics of the motor.
Using a gear ratio unsuited to the characteristics of the motor will not only prevent the motor from performing at its optimum, but may even cause damage to the other electronics.

●Motors will generally become very hot after running. Continuous running will reduce the life of the motor. Allow the motor to sufficiently cool between each run.

TOOLS (NOT INCLUDED)

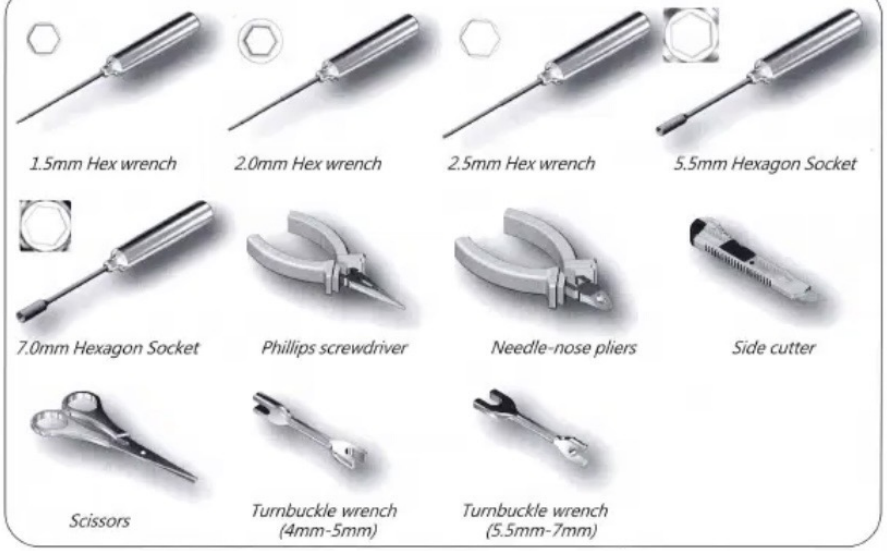

EQUIPMENT REQUIRED (NOT INCLUDED)

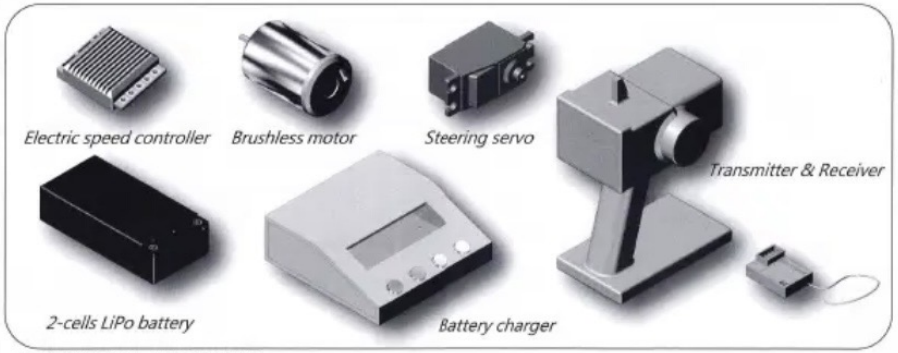

MISCELLANEOUS

Chassis Assembly

BAG-A

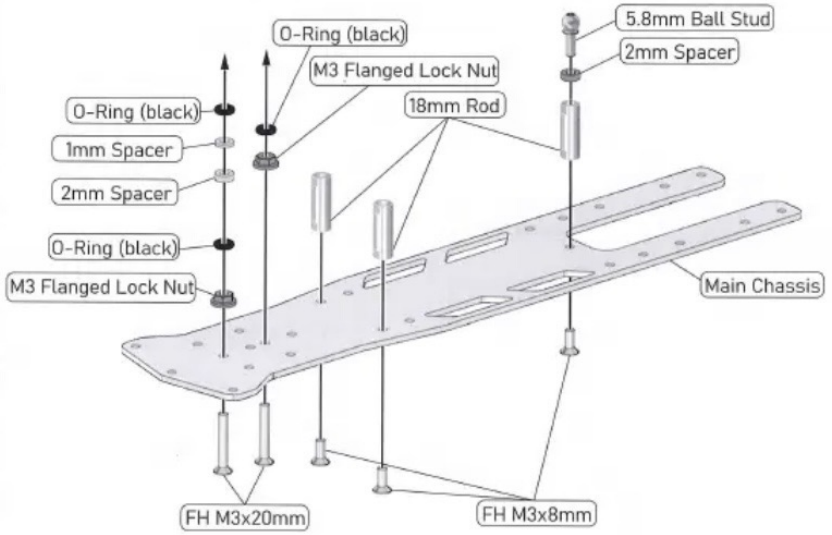

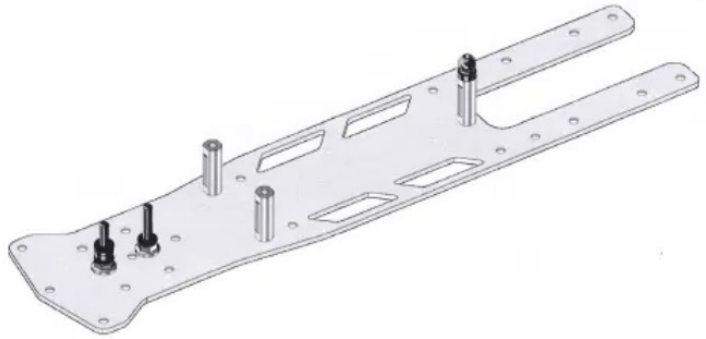

Front Arm Assembly

BAG-A

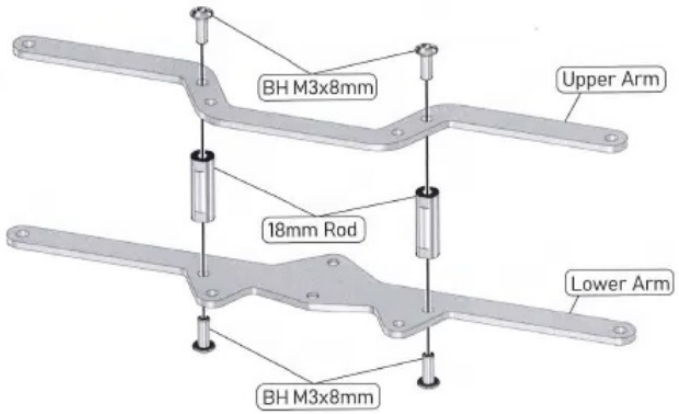

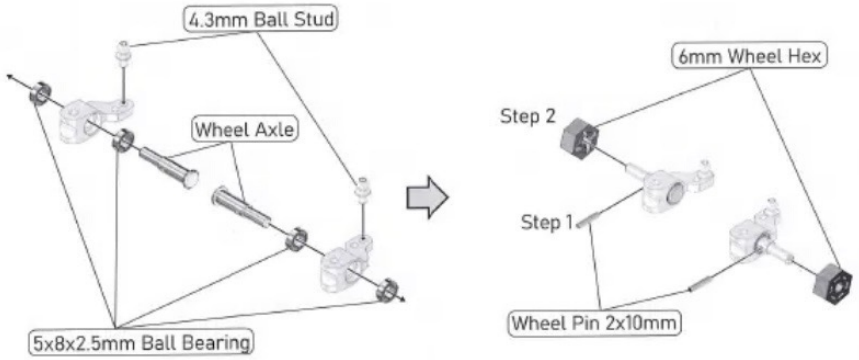

Front Arm Assembly

BAG-A

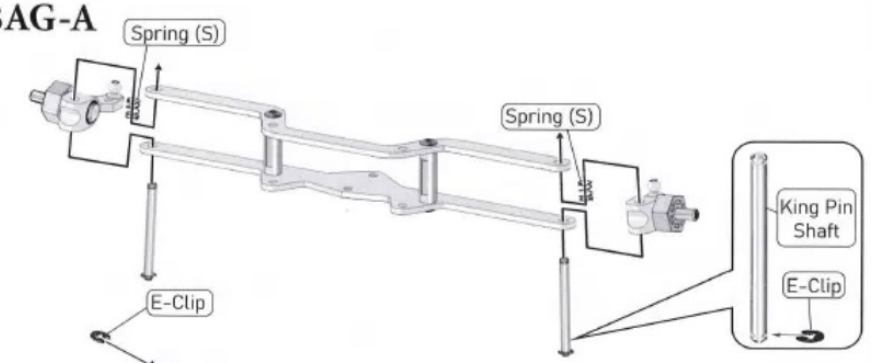

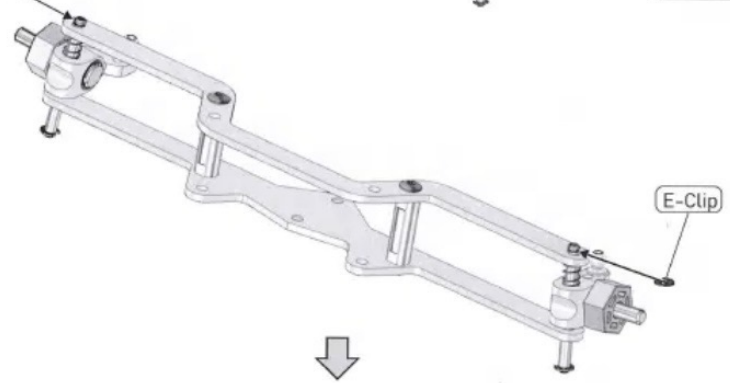

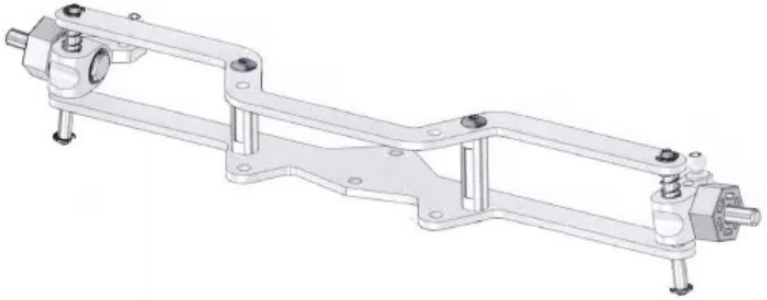

Chassis and Front End Assembly

BAG-A

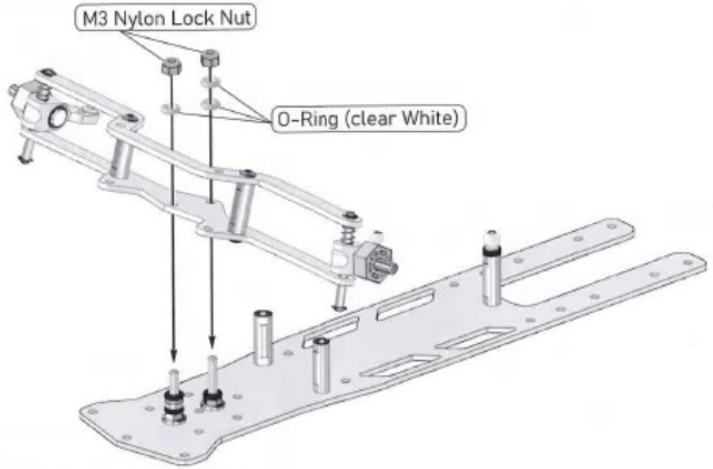

Standard Front arm movement setting:
1. Set the M3 lock nut flush with the screw as shown.
2. Set the M3 lock nut 2mm in from flush.

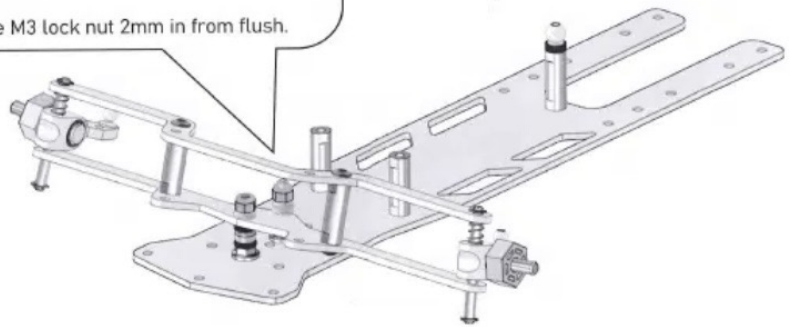

Servo Deck & Servo Saver Assembly

BAG-B

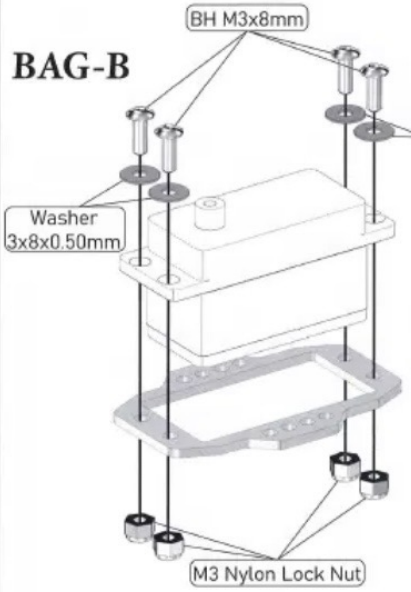

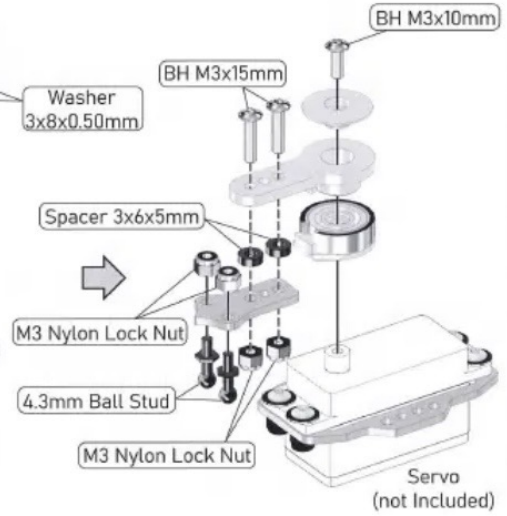

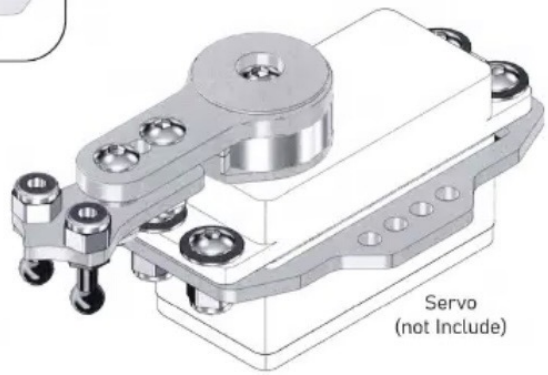

Shock Assembly

BAG-B

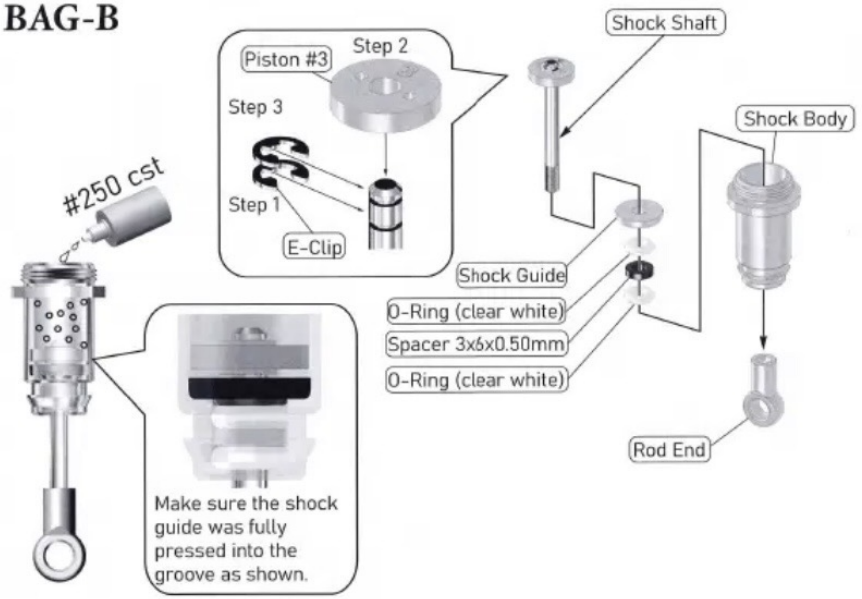

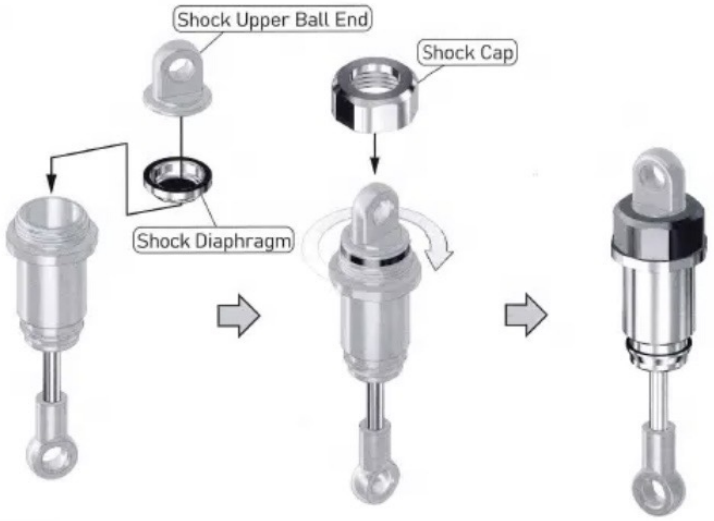

Turnbuckel Assembly

BAG-B

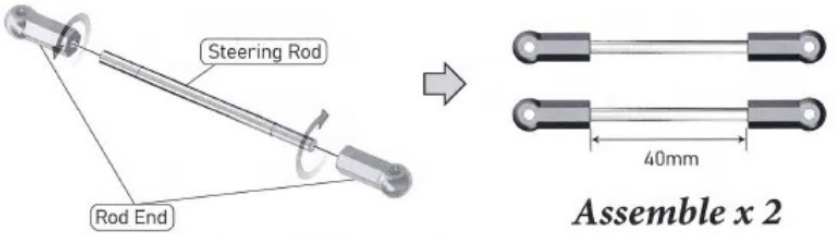

Assemble x 2

Servo Deck & Chassis Assembly

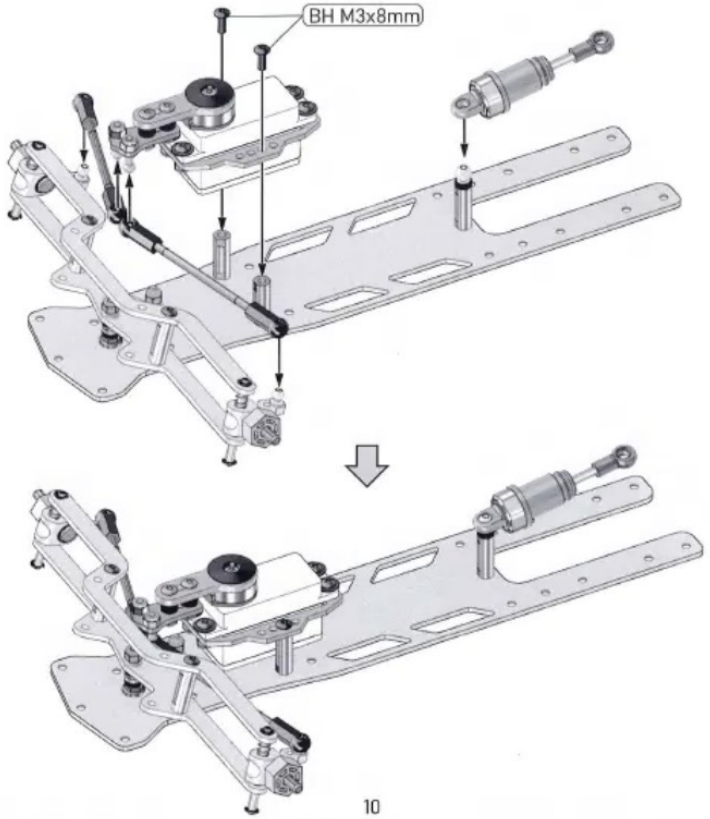

Front Bumper Assembly

BAG-B

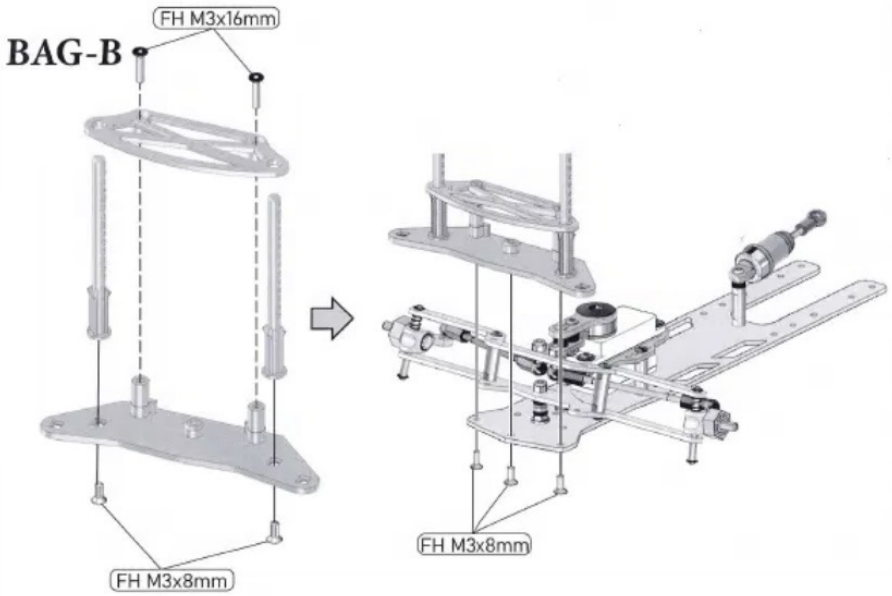

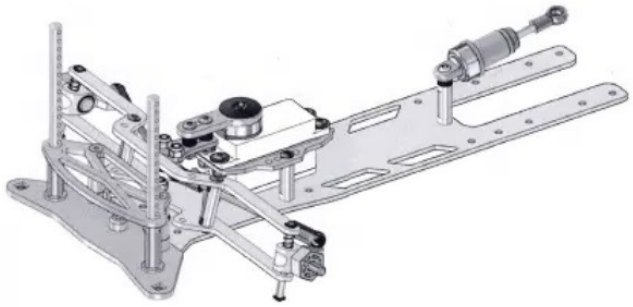

T-Bar Assembly

BAG-C

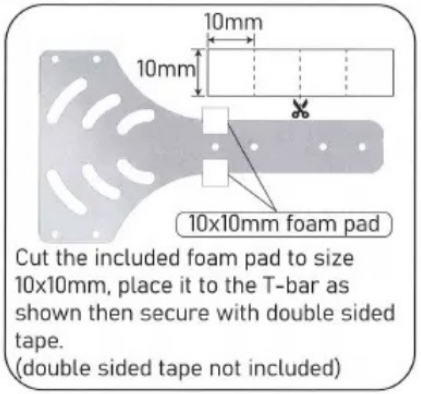

Cut the included foam pad to size 10x10mm, place it to the T-bar as shown then secure with double sided tape.
(double sided tape not included)

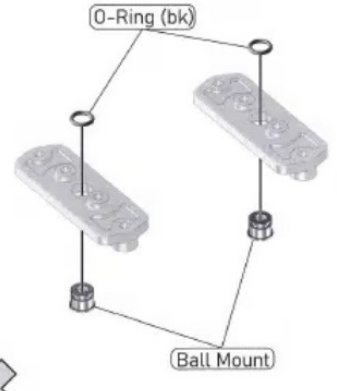

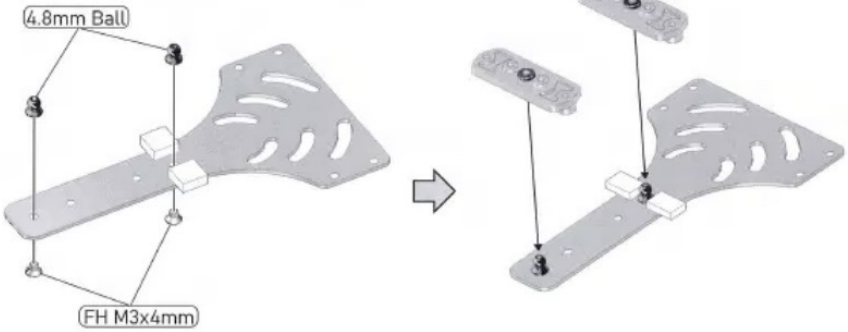

T-Bar Assembly

BAG-C

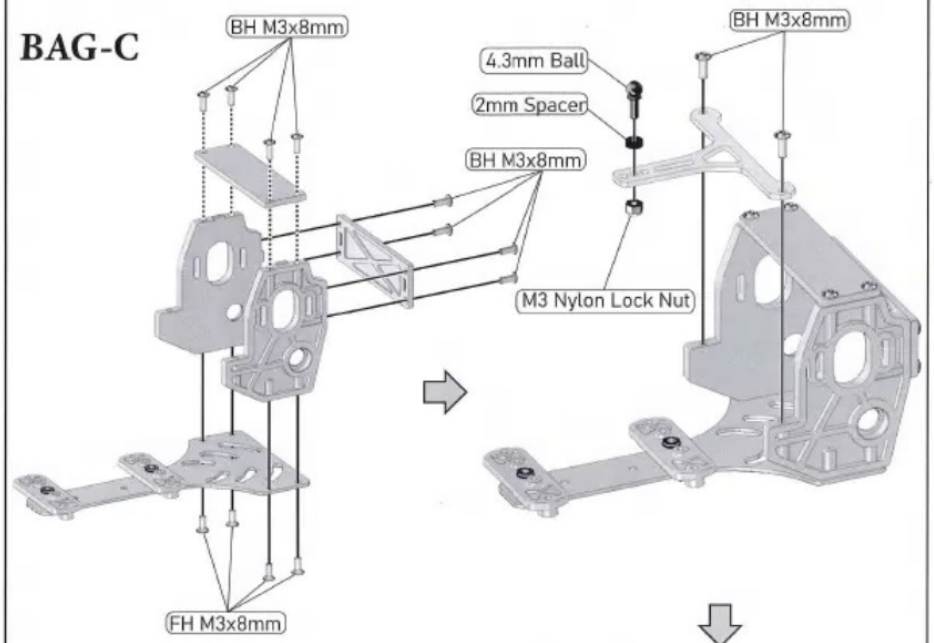

Drive Shaft Assembly

BAG-D

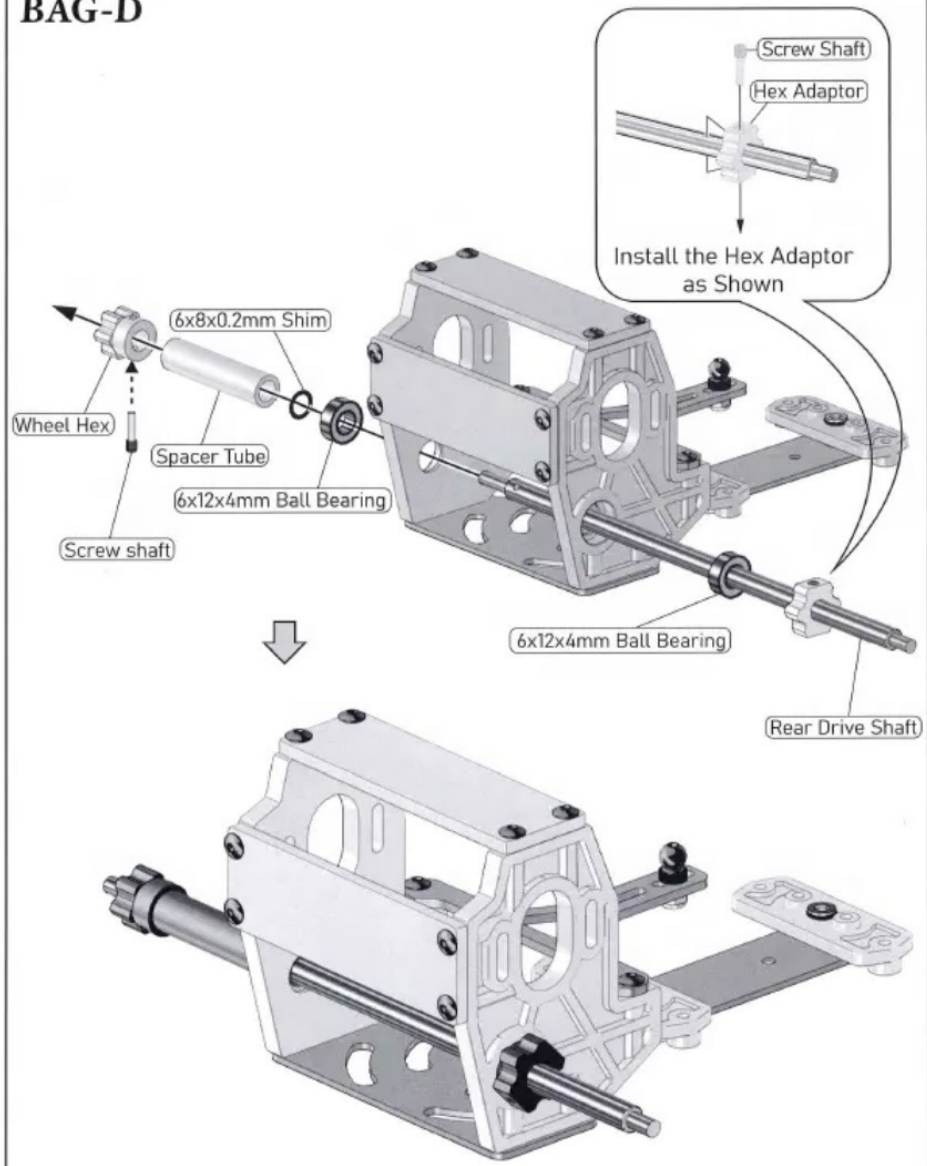

Ball Diff Assembly

BAG-D

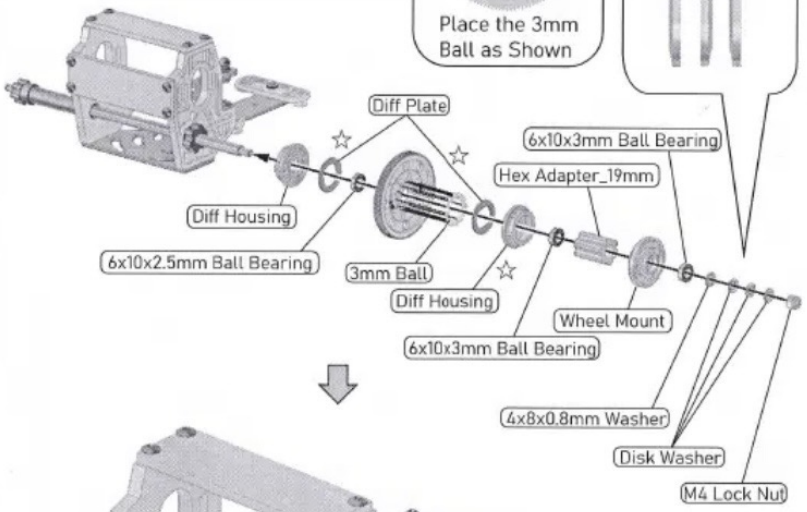

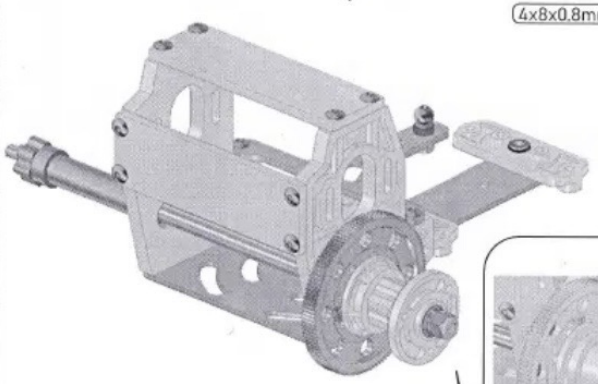

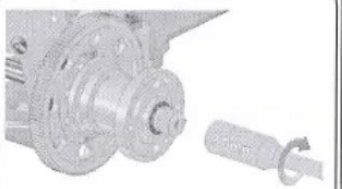

Standard Ball Differential Adjustment:
Hold the drive shaft, fully tighten the M4 lock nut, then loosen by a quarter turn.

Battery Holder & Rear Body Post Assembly

BAG-E

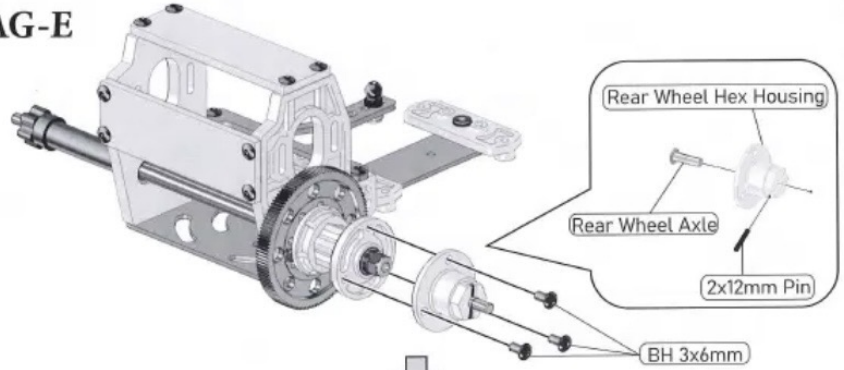

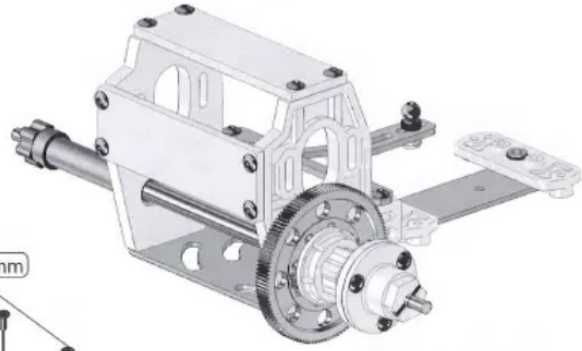

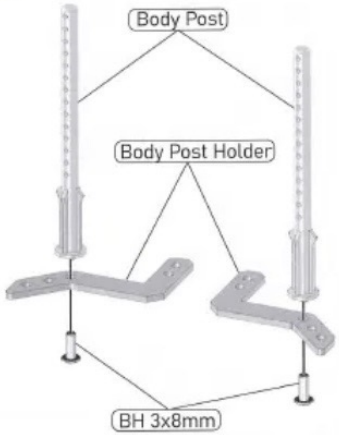

Battery Holder & Rear Body Post Assembly

BAG-E

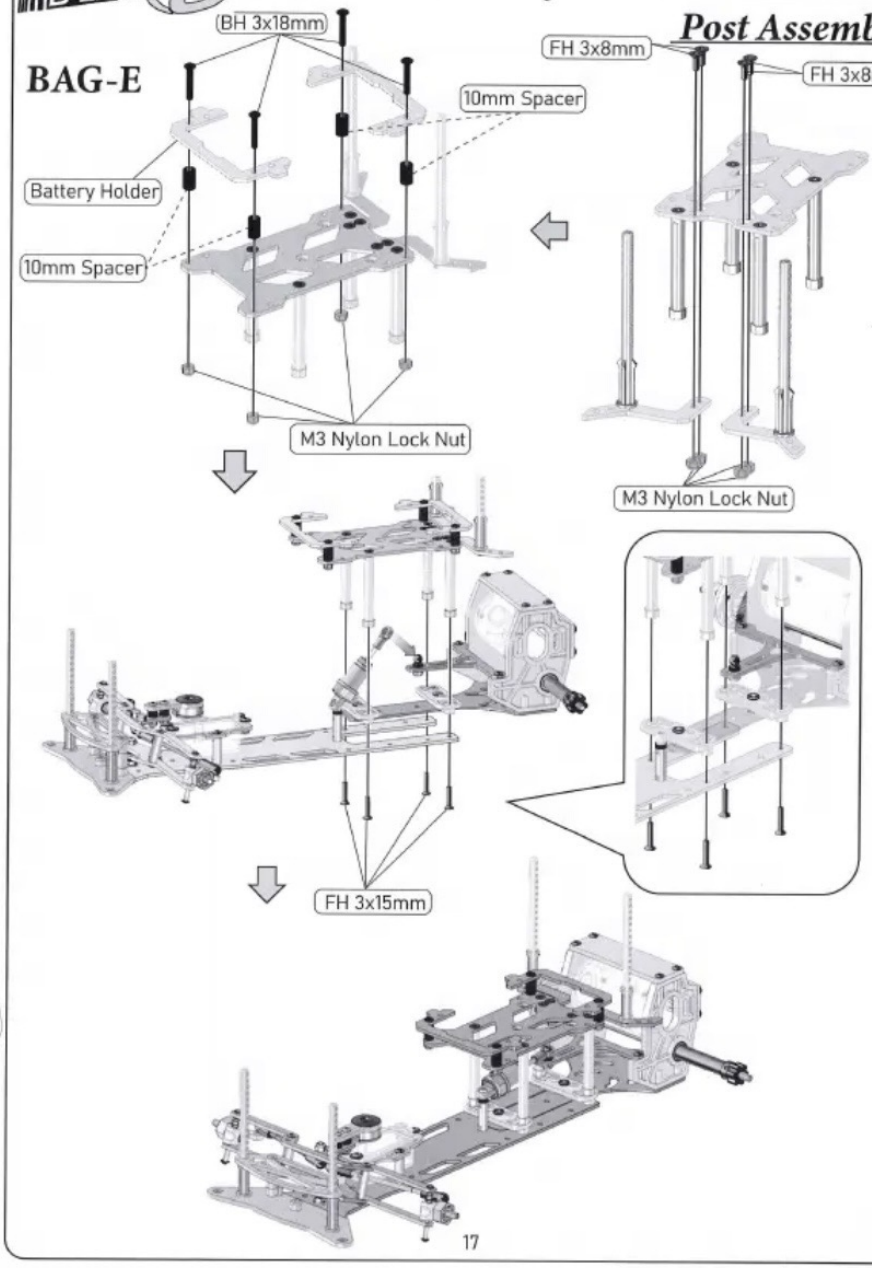

BAG-F

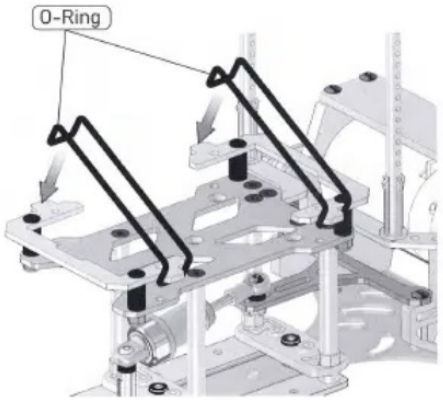

Secure the Battery with Included O-Ring as Shown

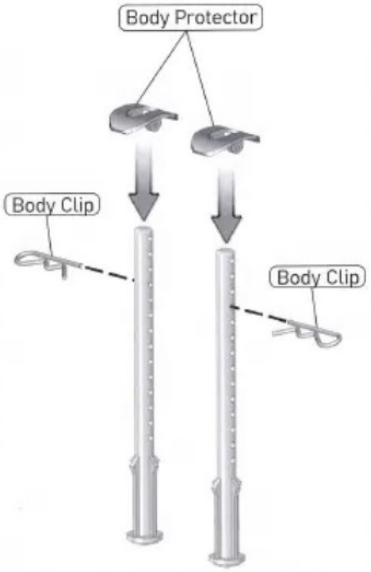

Secure the Body Protector as Shown

Set Gear Mesh

Set the gear mesh about 0.2mm gap

Pinion Gear Assembly

(Motor not included)

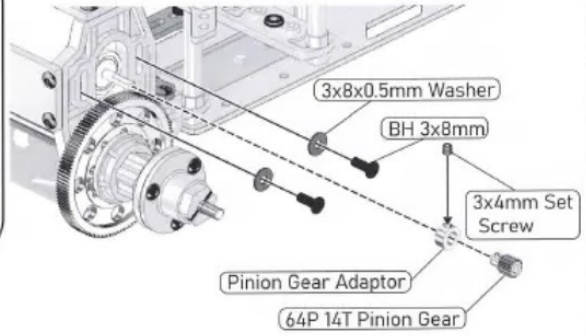

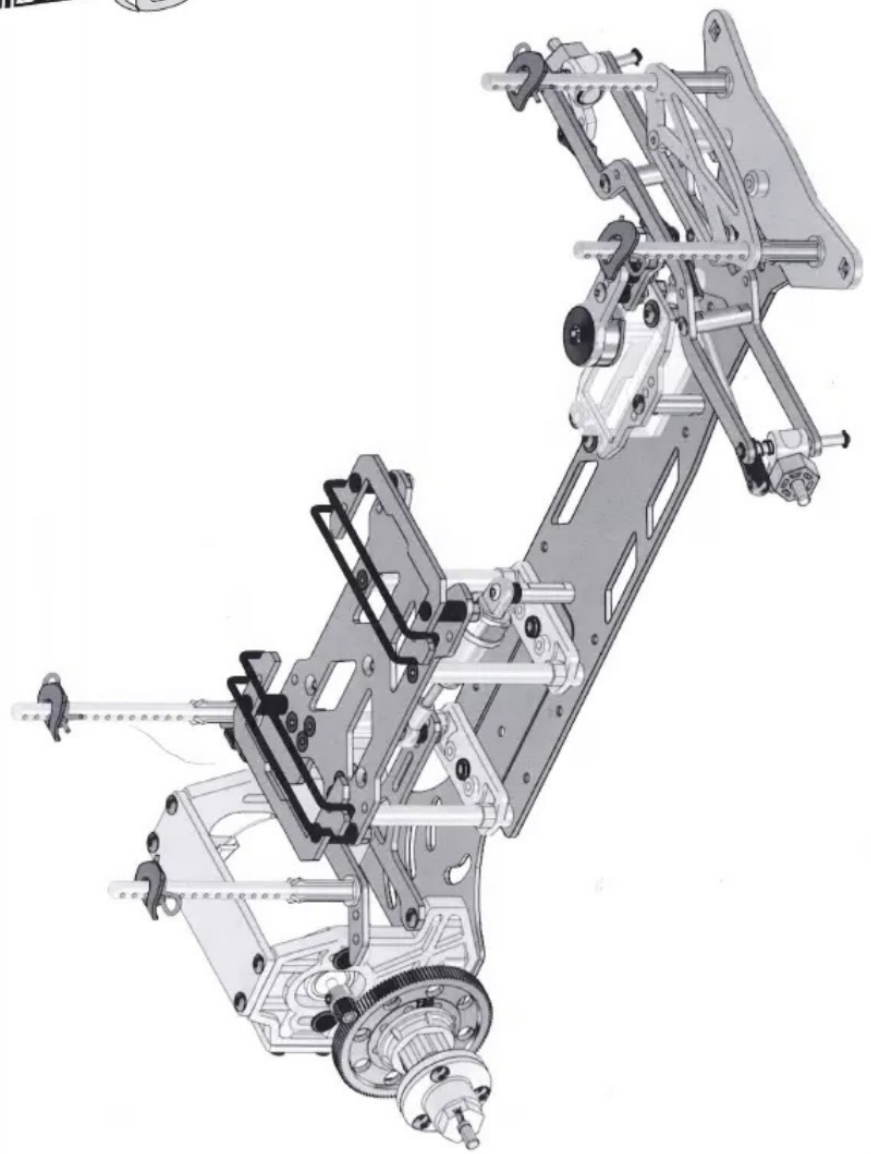

Spare Parts

LP301 Front Bumper	LP302 Replacement Parts-A	LP303 Replacement Parts-B	LP304 Replacement Parts-C
LP305 Servo Safer (25T, 24T, 23T)	LP306 Front Knuckle Set, (spring, axle, king pin)	LP307 Ball Mount Set	LP308 Front Arm Set
LP401 Spur Gear 64P 120T	LP402 Ball Diff Repaire Kit	LP403 Drive Shaft	LP404 Pinin Gear Set (64p-14T)
LP501 Main Chassis	LP502 Battery/Body/Damper Mount Set	LP503 T-Bar	LP701 Metal Ball Bearing Set
LP710 Repair Pin Kit	LP720 Repaire O-Ring Kit	LP730 Repair Spacers	LP731 Sponge 100mm x 100mm x 5mmx1pcs